


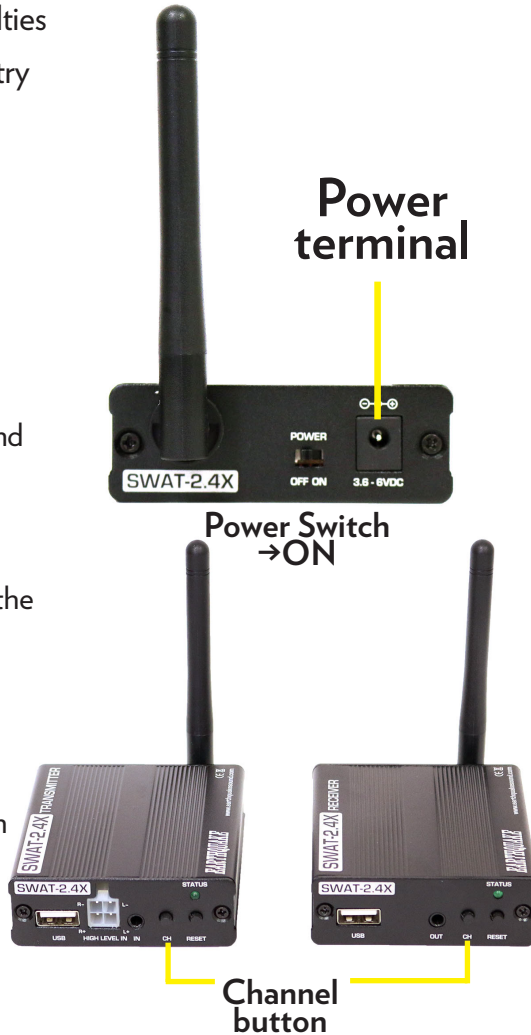

In case you're experiencing difficulties in pairing the SWAT-2.4X, please try the following simple steps:

1. Make sure that the Power supply is connected to the proper power port/terminal.
2. Place the SWAT2.4x transmitter and receiver next to each other.
3. Without any signal connected to the SWAT2.4x, turn power on both the receiver and transmitter.
4. Press and hold the channel button down for **30 seconds** on both the receiver and transmitter.




If the SWAT2.4X is still not pairing, please contact our tech support team at US Toll free 1 (800) 576-7944 or email tech@earthquakesound.com



In case you're experiencing difficulties in pairing the SWAT-2.4X, please try the following simple steps:

1. Make sure that the Power supply is connected to the proper power port/terminal.
2. Place the SWAT2.4x transmitter and receiver next to each other.
3. Without any signal connected to the SWAT2.4x, turn power on both the receiver and transmitter.
4. Press and hold the channel button down for **30 seconds** on both the receiver and transmitter.

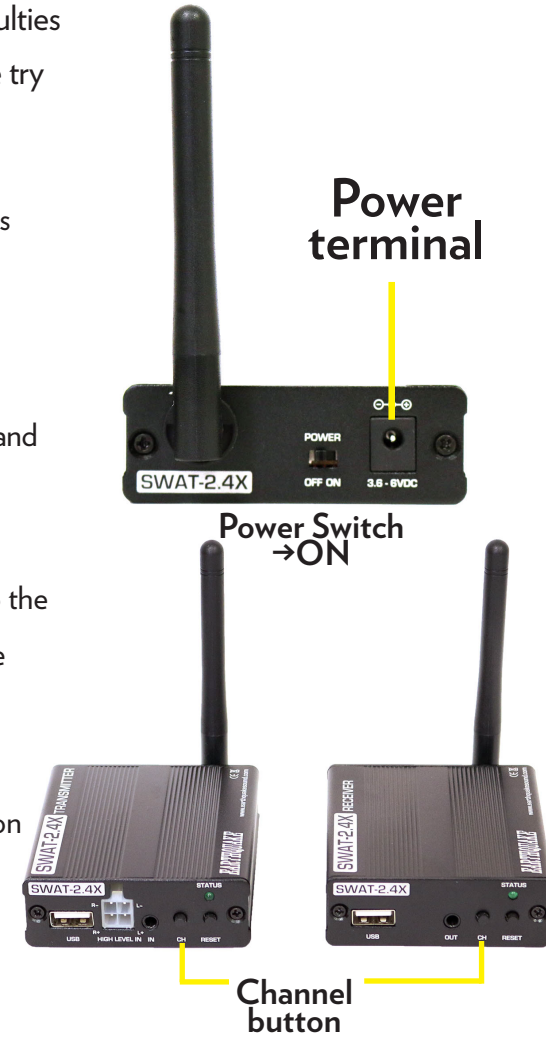

If the SWAT2.4X is still not pairing, please contact our tech support team at US Toll free 1 (800) 576-7944 or email tech@earthquakesound.com